

# ExCam<sup>®</sup> miniTube IP

---

## User Manual



## Table of contents

<b>1</b>	<b>Introduction .....</b>	<b>4</b>
<b>2</b>	<b>Technical data .....</b>	<b>4</b>
2.1	Explosion protection .....	4
2.2	Illustration of the model key.....	5
2.3	Electrical parameters of the camera.....	6
2.4	Connection cable Ex-d - Ex-e (SKD02-T/ASKD02-T).....	6
2.5	Video-technical characteristics .....	7
2.6	Other technical data .....	7
<b>3</b>	<b>Safety Instructions .....</b>	<b>8</b>
<b>4</b>	<b>Installation .....</b>	<b>9</b>
<b>5</b>	<b>Electrical connection .....</b>	<b>11</b>
5.1	Potential equalization .....	11
5.2	Connection work at the device (terminal box) and fuses .....	12
5.3	External connection and protection .....	16
5.3.1	Direct routing from the ExTB-2 into the safe area .....	16
5.3.2	Routing via ExConnection Rail (optional accessories).....	17
5.3.3	Appropriate cables & cable entries .....	18
5.3.4	Fusing .....	19
5.3.5	Plug assignments (RJ45).....	20
5.3.6	Tests prior to switching on voltage .....	21
<b>6</b>	<b>Working inside the camera housing (Ex-d).....</b>	<b>22</b>
6.1	Preparation for work: .....	22
6.2	Opening the pressure-resistant housing.....	22
6.3	Hardware Reset .....	24
6.4	Closing of the pressure-resistant housing .....	25
<b>7</b>	<b>Network access and visualization .....</b>	<b>27</b>
7.1	Network access .....	27
7.2	eneo Site Manager - assigning the IP address.....	27
7.3	Web interface, configuration and control .....	27
7.4	Visualization, RTSP video stream .....	29
7.5	ONFIV, VMS-Integration .....	29
<b>8</b>	<b>Maintenance / Modification.....</b>	<b>30</b>
<b>9</b>	<b>Disposal / Recycling .....</b>	<b>30</b>
<b>10</b>	<b>Drawings &amp; 3D models, certificates and further documentation.....</b>	<b>30</b>

## Table of Figures and Charts

Table 2-1 Model key .....	5
Figure 2-1 Sectional view of SKD02-T .....	6
Figure 2-2 Sectional view of ASKD02-T .....	7
Table 2-2 Other technical data .....	7
Table 4-1 Mounting accessories .....	10
Figure 5-1 ExCam miniTube IP Potential equalization .....	11
Table 5-1 Potential equalization .....	12
Figure 5-2 Ex-d Cable gland and cable .....	12
Figure 5-3 ExCam miniTube IP T08-VA1.2.K1.BOR-N.N-xxx.x- <b>T</b> .....	12
Figure 5-4 ExCam miniTube IP T08-VA1.2.K1.BOR-N.N-xxx.x- <b>P</b> .....	13
Figure 5-5 Video Tutorial ExTB-3 .....	13
Table 5-2. Wire assignment of terminal box ExTB-2 .....	14
Table 5-3 Wire assignment of terminal box ExTB-2/3 (ASKD02-T) .....	14
Figure 5-6 Sample circuit of terminal box ExTB-2 .....	15
Figure 5.7 – Connection to the terminal box .....	15
Figure 5-8 ExTB-3 -> Safe area .....	16
Figure 5-9 ExTB-2 -> ExConnection Rail .....	17
Figure 5-10 Ex-d cable selection .....	18
Figure 5-11 Barrier gland .....	19
Figure 5-12 Plug assignment, RJ45 .....	20
Figure 6-1 Removing the weather protection roof .....	23
Figure 6-2 Opening ExCam miniTube IP .....	23
Figure 6-3 Structure of the camera .....	25

## History of revisions

Product: ExCam® miniTube IP  
 Title: User Manual for ExCam® miniTube IP  
 Doc. -Id. 240307-PT08BA-ES-ExCam miniTube IP\_en\_rev.00.docx  
 Author: Eva Schneider, Grad. Eng. (UAS)  
 Created on: 07.03.2024

Rev. Index	Date	Name	Comment	Approved by the ATEX Supervisor
0	07.03.2024	E. Schneider	Compilation of the document	
1				
2				

# 1 Introduction

The ExCam miniTube IP is a compact, powerful IP camera with motorized varifocal lens. It is certified by ATEX, IECEx and more. The camera has a high-definition television resolution (1920x1080) and is equipped with a 1/2.8" CMOS sensor for great image quality and incomparable light sensitivity.

The ExCam series is certified both in accordance with the European (ATEX) and international directive (IECEx). The explosion-protected housing is approved for ATEX group II for zones 1, 2, 21 and 22 including the explosion groups IIC / IIIC. To see other approvals, please visit our website at [www.samcon.eu/en](http://www.samcon.eu/en)

When designing the ExCam miniTube IP, we attached a very high importance to safety, mechanical precision and high quality of stainless steel.

## 2 Technical data

### 2.1 Explosion protection

Identification marks

acc. to Directive 2014/34/EU:

 II 2G (zone 1 and 2)  
 II 2D (zone 21 and 22)  
 I M2 <sup>1</sup>

Explosion protection (gas):

Ex db IIC T6 Gb

Explosion protection (dust):

Ex tb IIIC T80°C Db

Explosion protection (mining):

Ex db I Mb

Protection class:

IP 66/68 (IEC /EN 60529)

Ambient temperature (EX):

-30°C...+50°C

Named testing laboratory:

TÜV Rheinland (number 0035)

EU type approval certificate:

TÜV 18 ATEX 8218X (2018)

IECEx Certificate of Conformity:

TUR 18.0023X (2018)

INMETRO Certificate:

TÜV 23.0363X (2023)

EAC-Ex TUR Report:

TC RU C-DE.HA65.B.01652/22

Other certificates see:

<https://www.samcon.eu/en/products/network/excam-minitube-ip/>



**Attention!**

**The instructions stated on the type plates have to be observed!**

<sup>1</sup> Certification for mining only for models with armoured cable and plug termination.

## 2.2 Illustration of the model key

Ex product-name	Model variants					Article no.
1)	2) Type	3) Housing- combination	4) Temp.- range	5) Cable length [m]	6) Cable termin.	Link to digital type plate
ExCam miniTube IP	T08-	VA1.2.K1.BOR-	N.N-	005.N-	P	<a href="#">22070526</a>
	T08-	VA1.2.K1.BOR-	N.N -	005.N-	T	<a href="#">22070527</a>
	T08-	VA1.2.K1.BOR-	N.N -	005.A-	P	<a href="#">22070529</a>
	T08-	VA1.2.K1.BOR-	N.N -	005.A-	T	<a href="#">22070530</a>

Table 2-1 Model key

### Explanations:

- 1) **ExCam miniTube IP** = Functional camera description of the ExCam Series (technical data/ specification of the individual camera module)
- 2) **T08** = SAMCON Production- Type 08
- 3) **VA1.2.K1.BOR** = T07 ex d housing (stainless steel 1.4404) with small diameter  $\varnothing_{VA1}=79\text{mm}$   
**VA1.2.K1.BOR** = T07 VA1.2 housing with medium body length ( $L_R = 158\text{mm}$ )  
**VA1.2.K1.BOR** = K1 cable gland flange  
**VA1.2.K1.BOR** = Borosilicate sight glass DIN7080 (standard, for video cameras within visible spectral range:  $\lambda = 350\dots2000$  [nm] and photografical infrared range (NIR), not suitable for thermographic applications (MIR/ FIR))
- 4) **N.N**= Normal temperature range ( $T_{amb} < +50^\circ\text{C}$ )  
**N.N**= No PTC heater integrated ( $T_{amb} > -30^\circ\text{C}$ )
- 5) **005.N** = Length of the connection line in meter at delivery; 5m is the standard cable length, max. cable length is: 005...100 [m]  
**005.N** = Non armoured cable  
**005.A** = Armoured cable
- 6) **P** = Plug- termination (*standard*)  
 CAT6, RJ-45 network plug (heavy duty), AWG 26-22, contact assignment acc. To specification EIA/TIA-568B  
  
**T** = Terminal Box termination (*optional*)  
 4 x PoE Mode A connection (camera PoE)  
 (see chapter electrical connection)

## 2.3 Electrical parameters of the camera

### Power supply of the camera via Ethernet (PoE):

Voltage supply:	PoE, IEEE 802.3af type 1 class 2
Reference voltage:	+12 V DC
Maximum power consumption:	4.4 W
Typical power consumption:	3.0 W

## 2.4 Connection cable Ex-d - Ex-e (SKD02-T/ASKD02-T)

Description:	Data transfer and power supply of the camera module (compliant with DIN EN 60079-14)
Jacket colour:	Green (GN), similar to RAL3001

### System cable SKD02-T:

Outside diameter:	8.9 ± 0.3 mm
Bending radius:	8 x D <sub>a</sub> when installed and 4 x D <sub>a</sub> after relocation
Data line:	4 x 2 x AWG23/1 CAT.6
Properties:	PUR halogen-free, flame-retardant, UV-resistant, chemical resistance, shielded

Quick link:

[https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/SKD02-T\\_Datasheet.pdf](https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/SKD02-T_Datasheet.pdf)

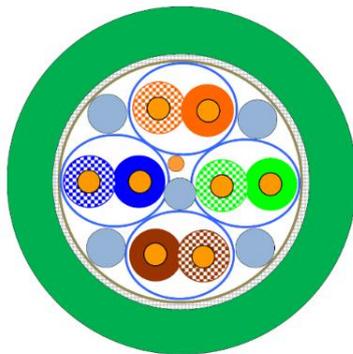


Figure 2-1 Sectional view of SKD02-T

**System cable ASKD02-T:**

Outside diameter:	12.0 ± 0.4 mm
Bending radius:	20 x D <sub>a</sub> when installed and 10 x D <sub>a</sub> after relocation
Data line:	4 x 2 x AWG23/1 CAT.6
Properties:	PUR halogen-free, flame-retardant, UV-resistant, chemical resistance, shielded (see <a href="http://www.samcon.eu">www.samcon.eu</a> )

**Quicklink:**

[https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/ASKD02-T\\_Datasheet.pdf](https://www.samcon.eu/fileadmin/documents/en/60-Assembling%26mounting/ASKD02-T_Datasheet.pdf)

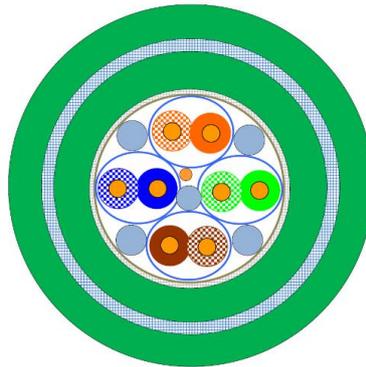


Figure 2-2 Sectional view of ASKD02-T

## 2.5 Video-technical characteristics

We use the eneo Module Network Camera in a pressure-resistant enclosure. For details, please refer to the Product Documentation, video-technical data of eneo®:

<https://eneo-security.com/en/ism-72m2713w0a.html>



## 2.6 Other technical data

	<b>Camera (Ex-d)</b>	<b>Terminal box (Ex-e)</b>
Permissible ambient temperature	-30°C ... +50°C	-60°C ... +55°C
Protection class as per EN 60529/IEC 529	IP66/68 (Test conditions: 24h/3m water column 5°C)	IP66
Housing material	stainless steel, mat. no. 1.4404	polyester resin
Weight	about 2.6 kg	about 1 kg
Dimensions	D79mm x 158mm	145mm x 145mm x 71mm

Table 2-2 Other technical data

### 3 Safety Instructions

Please absolutely observe the installation instruction's safety directions of the T08 ExCam series!



Quick link:

<https://www.samcon.eu/fileadmin/documents/en/22-Ex-Network-Cameras/ExCam-Series-T08-EX-Installation-Manual-2020.pdf>

It is absolutely mandatory to adhere to the national safety regulations and regulations for prevention of accidents, as well as to the safety instructions given below in this User Manual!



**Attention!**

Cameras of type T08 ExCam are not suitable for use in zones 0 and 20. The ambient temperature, temperature class and explosion group written on the enclosure nameplate must be absolutely adhered to! The customer is not allowed to make any alterations of the camera! The camera must be operated in a proper and sound condition and only in the way intended.



**Attention!**

Repairs may only be carried out by using original parts from the manufacturer. Repairs which affect the explosion protection may only be carried out in accordance with the nationally applied regulations and exclusively by the manufacturer.



**Attention!**

Prior to installation, take external sources of heat or cold into account! The temperature ranges prescribed for storage, transport and operating must be adhered to!



**Attention!**

Adhere to the warnings given on the nameplate:

**“WARNING – DO NOT OPEN IN HAZARD AREAS“**



Using the camera in explosion-protected areas with regard to temperature and dust layers is defined in the respective national regulations.



When installing the ExCam, adhere to the requirements of the EN/IEC 60079-14.

## 4 Installation

For commissioning and operating the camera, the relevant national regulations, as well as the generally accepted rules of technology shall prevail. Before mounting the camera, thoroughly check it for any transport damage, especially on the housing and cable. Installation, electrical connection and the first start must only be carried out by qualified specialists.

### Work preparation:



**Attention!**

**Prepare your work carefully and in accordance with the relevant regulations.**



**Attention!**

**Depending on classification of hazard areas, it is imperative to obtain a work approval first!**

**When you open the pressure-resistant enclosure under voltage, it is absolutely necessary to prevent potentially explosive atmosphere!**

To ensure the best image quality delivered by the network camera, plan the installation site carefully (consider light conditions, object distance or size, angle and minimum object distance to the focus).

- Use appropriate tools and aids.
- When working, ensure a safe stand.
- Make sure that any static charge is avoided.



**Attention!**

**Please observe the national security, installation and accident prevention regulations (e.g. DIN EN 60079-14) and the safety instructions in this User Manual, as well as the ones in the Installation Guidelines!**



**Attention!**

**Adhere to the provisions of the IECEx, ATEX and EX installation instructions for mounting and starting up!**

The ExCam<sup>®</sup> miniTube IP consists of a flame-proof camera housing (Ex-d) and, optionally (models with a terminal box ...-T), a terminal box of a high degree of safety (Ex-e). Both units are connected via a 5 m cable. Mount the camera according to the desired field of view. Install the terminal box so that a good accessibility is provided, in order to facilitate electrical connection.

Drawings for drill hole patterns and further information can be viewed on our product page:

Quick link:

<https://www.samcon.eu/en/products/network/excam-minitube-ip/>



### Optional mounting accessories

<p>Wall bracket WMB-...</p>		<p><b>WALL MOUNT WMB-VA0.x/1.x</b>        Wall bracket for cameras of the T08-VA1.x-Series        Suitable for hanging the cameras on walls.        Material: Stainless steel 1.4404        Load bearing: 25 kg        Dimensions: 80 x 100 x 205 mm</p>
<p>Weather protec- tion roof WPR-...</p>		<p><b>WEATHER PROTECTION ROOF WPR-VA1.2</b>        Weathershield for cameras of the T08-VA1.2-Series</p>
<p>Pole adapter PMB-...</p>		<p><b>WALL MOUNT BRACKET PMB</b>        Pole adapter for VA wall mount        Material: stainless steel 1.4404        Suitable for pole diameters        between 50 and 100 mm        Load-bearing capacity: 50 kg        Dimensions: 120 x 180 (x 130 bei Mast Ø 60 mm)</p>

Table 4-1 Mounting accessories

## 5 Electrical connection



### Attention!

The electrical connection of the equipment may only be carried out by qualified and skilled personnel!



### Attention!

It is absolutely necessary to ground the ExCam® series' housing via the PA connection.



### Attention!

Please observe the national security, installation and accident prevention regulations (e.g. DIN EN 60079-14) and the safety instructions in this User Manual, as well as the ones in the Installation Guidelines!

The delivered ExCam® miniTube IP is equipped with an electrical connection cable of the type (A)SKD02-T. The maximum transmission range from the camera to the next active network interface is 100 meters and can be individually specified by the client. The user is NOT authorised to do electrical connection procedures inside the pressure-resistant enclosure.

### 5.1 Potential equalization

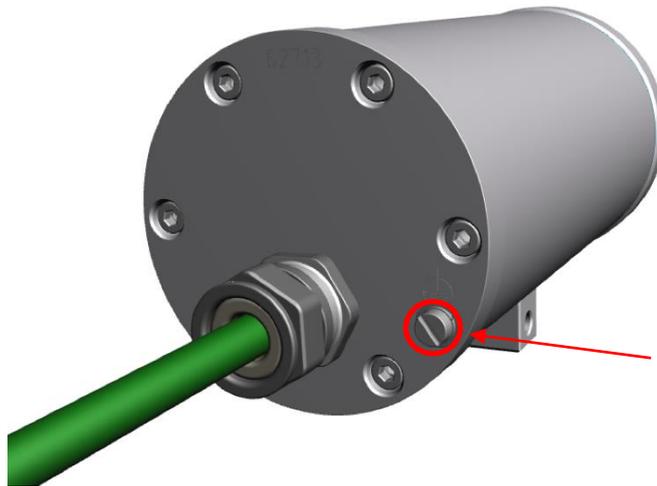


Figure 5-1 ExCam miniTube IP Potential equalization

Potential equalization/grounding of the camera housing is absolutely necessary, in order to avoid static charges and thus the formation of sparks. For this purpose, a screw terminal is provided at the rear side, at the bottom (right) (see Figure 5-1). The cross-section of the potential equalization should comply with the National Ground Rules (at least 4mm<sup>2</sup>).

Wiring table:

Potential	Colour (IEC 60757)	Cross-section	Comment
PA	GN/YE	4 mm <sup>2</sup> (rigid)	Terminal: Slotted screw M4x0.7 (DIN 84) with washer Ø9mm (DIN 125A), Keep 3 Nm tightening torque!

Table 5-1 Potential equalization

## 5.2 Connection work at the device (terminal box) and fuses

Ex d cable gland for SKD02-T:  
 ADE 1F2 Type5 - M20 (Neopren)  
 7-12mm  
 Ex d cable gland for ASKD02-T:  
 ADE 4F Type6 - M20;  
 10-16mm

Ex-cable

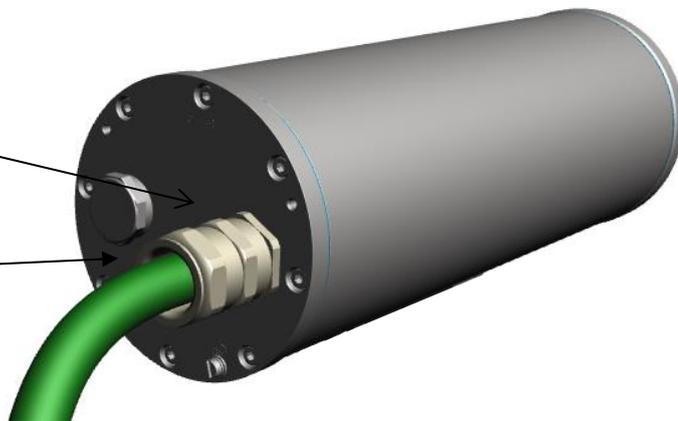


Figure 5-2 Ex-d Cable gland and cable

### Power supply for the camera (PoE)

Voltage supply:	PoE, IEEE 802.3af type 1 class 2
Reference voltage:	+12 V DC
Maximum power consumption:	4.4 W
Typical power consumption:	3.0 W

The figures 5.3 and 5.4 illustrate the potential cable terminations of the ExCam miniTube IP. Possible terminations are: terminal box or plug.



Figure 5-3 ExCam miniTube IP T08-VA1.2.K1.BOR-N.N-xxx.x-I



Figure 5-4 ExCam miniTube IP T08-VA1.2.K1.BOR-N.N-xxx.x-P



**Attention!**  
**Never open the Ex-e terminal box under voltage!**



**Attention!**  
**Adhere to the international installation regulations for connection chambers with increased safety (Ex-e).**



**Attention!**  
**Adhere to attached separate User Manual for the Ex-e terminal box.**

### Video Tutorial:

Observe our video tutorial:

“SAMCON 01 Wiring the cable SKDP03-T to the junction box ExTB-3”  
<https://go.samcon.eu/v01>



Figure 5-5 Video Tutorial ExTB-3

The pin assignment of the SKD02-T is executed in accordance with the standard EIA/TIA-568B as follows:

Camera (Ex-d) (T568B)	Colour SKD02-T (IEC60757)	Terminal ExTB-2	Cross-sectional surface	Comment
Tx+	WH / OG	1	0.26 mm <sup>2</sup>	Solid conductor
Tx-	OG	2	0.26 mm <sup>2</sup>	Solid conductor
Rx+	WH / GN	3	0.26 mm <sup>2</sup>	Solid conductor
Rx-	GN	4	0.26 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	WH / BU	5	0.26 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	BU	6	0.26 mm <sup>2</sup>	Solid conductor
(PoE GND)	WH / BN	7	0.26 mm <sup>2</sup>	Solid conductor
(PoE GND)	BN	8	0.26 mm <sup>2</sup>	Solid conductor
GND/SHD	YE / GN	PE	2.5 mm <sup>2</sup>	Flex

Table 5-2. Wire assignment of terminal box ExTB-2

The pin assignment of the ASKD02-T is executed in accordance with the standard EIA/TIA-568B as follows:

Camera (Ex-d) (T568B)	Colour ASKD02-T (IEC60757)	Terminal ExTB-2/3	Cross-sectional surface	Comment
<b>Reinforcement</b>	YE / GN	PE	2.5 mm <sup>2</sup>	Flex
Tx+	WH / OG	1	0.26 mm <sup>2</sup>	Solid conductor
Tx-	OG	2	0.26 mm <sup>2</sup>	Solid conductor
Rx+	WH / GN	3	0.26 mm <sup>2</sup>	Solid conductor
Rx-	GN	4	0.26 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	WH / BU	5	0.26 mm <sup>2</sup>	Solid conductor
(PoE +48 VDC)	BU	6	0.26 mm <sup>2</sup>	Solid conductor
(PoE GND)	WH / BN	7	0.26 mm <sup>2</sup>	Solid conductor
(PoE GND)	BN	8	0.26 mm <sup>2</sup>	Solid conductor
GND/SHD	YE / GN	PE	2.5 mm <sup>2</sup>	Flex

Table 5-3 Wire assignment of terminal box ExTB-2/3 (ASKD02-T)

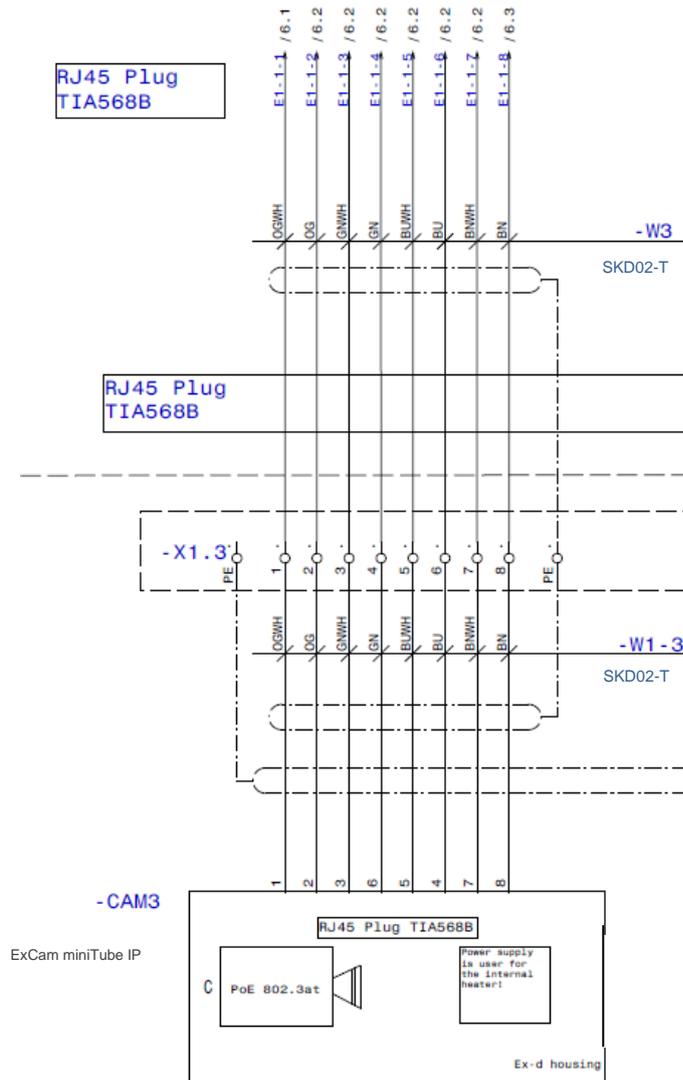


Figure 5-6 Sample circuit of terminal box ExTB-2

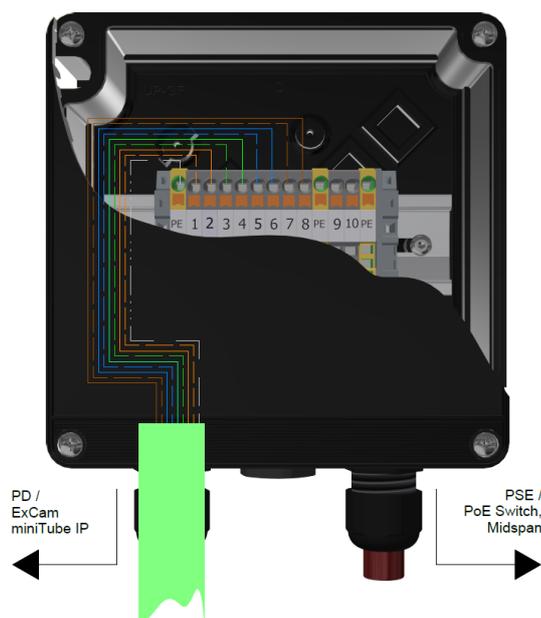


Figure 5.7 – Connection to the terminal box



**Attention!**

Introduce the foiling up to about 15 mm close to the terminals, in order to prevent alien crosstalk. Make sure that the foiling cannot cause any short circuit of the data pairs!



**Attention!**

Bring the twisted pair composite up to about 10 mm close to the terminals, in order to ensure interference immunity.



**Attention!**

Use only terminals approved by SAMCON.



**Attention!**

Finally, check your network installation with a Class-D Link Test.

### 5.3 External connection and protection

There are several options of routing the ExTB-2 terminal box to a safe area:

#### 5.3.1 Direct routing from the ExTB-2 into the safe area

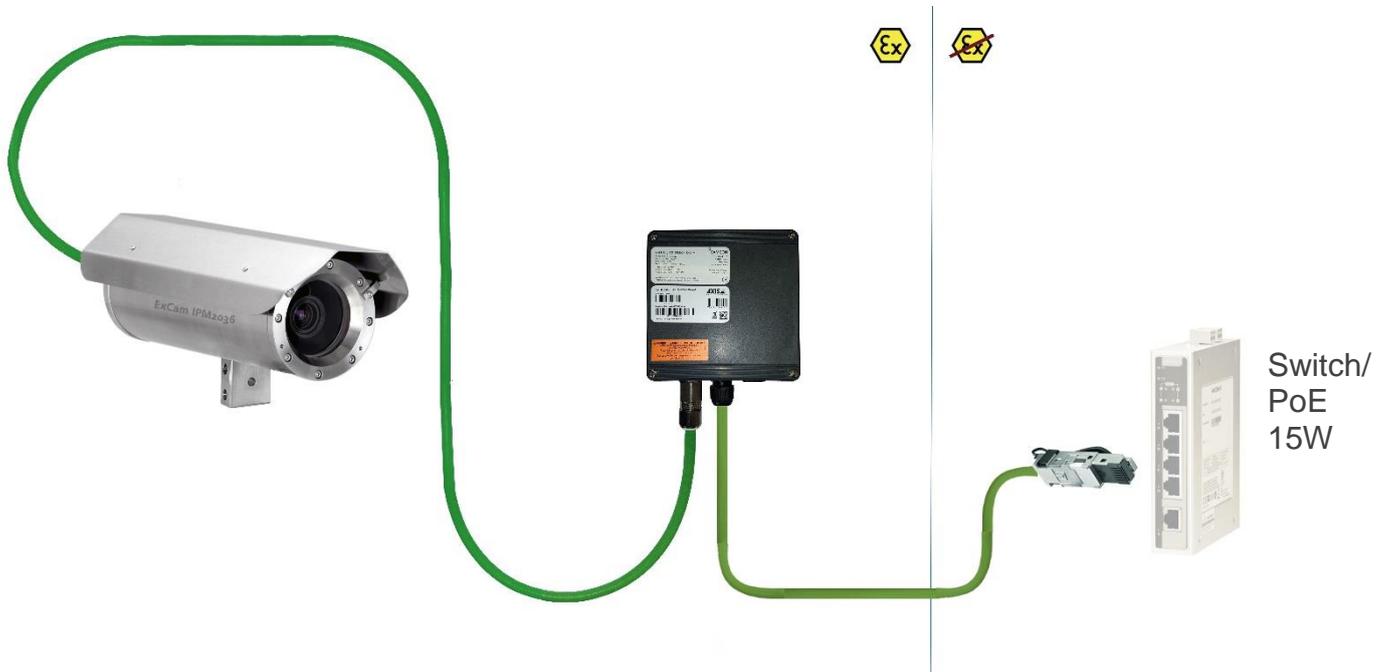


Figure 5-8 ExTB-3 -> Safe area

In the case of direct routing from ExTB-2 to the safe area, the voltage signal is led from the safe area to the terminal box. Please observe the terminal box assignment, as described above.



**Attention!**  
Cables and wires must comply with the requirements of the IEC 60079-0/1/7 & 14.



**Attention!**  
The supply line must have a sufficient cross-section. The cable protection must comply with national and international regulations.

### 5.3.2 Routing via ExConnection Rail (optional accessories)



Figure 5-9 ExTB-2 -> ExConnection Rail

In the case of routing the ExTB-2 into an ExConnection Rail, larger installation distances can be managed.

**Note:**

*In hazardous areas, the ExConnection Rail (optional accessories) acts as a PoE+ switch, a media converter from copper to fibre-optic cable, as well as a power supply for the cameras.*

### 5.3.3 Appropriate cables & cable entries

An integral part of the device safety is the correct selection of the cables, wires and cable entries.



**Attention!**  
**Cables and wires must comply with the requirements of the IEC 60079-0/1/7 & 14.**



**Attention!**  
**The supply line must have a sufficient cross-section. The cable protection must comply with national and international regulations.**

For non-binding configuration and planning guidelines, please visit our website:



Perhaps our video will help you: "Cables for flameproof devices in potentially explosive atmospheres"

<http://go.samcon.eu/video-cable-ex>



Figure 5-10 Ex-d cable selection

Particularly for installations requiring a suitable barrier gland, make sure that you handle them correctly and observe the rules and notes given in the respective mounting and assembly instructions.

We show the essential procedures in the following video tutorial:

**Video Tutorial:**

Please note our video tutorial:



“SAMCON 02 Mounting and installing Ex-d barrier glands to ExConnection Rails”  
<https://go.samcon.eu/v02>



Figure 5-11 Barrier gland

### 5.3.4 Fusing

PoE power supply requires no fuses. The power supply fusing depends on the cable cross-section and length.



**Attention!**

**Please pay attention to the national and international regulations regarding selectivity and line protection.**

### 5.3.5 Plug assignments (RJ45)

The data transfer of the ExCam miniTube IP uses a 100 Mbit/s Ethernet connection (100BASE-TX). If the cable termination uses a plug, the latter should be plugged into the RJ45 PoE slot of the network device (PSE). Prior to connecting it to the camera, the network device (PSE) can already be supplied with power, hence there is no „power ON“ priority which has to be observed.



**Attention!**

**Use appropriate RJ45 plugs! Check the cable shielding, cross-section and the outside diameter!**



**Attention!**

**It is imperative to ensure a correct routing of the individual wires according to the EIA/TIA-568B"**



**Attention!**

**Finally, check your network installation with a Class-D Link Test.**

Detailed instructions on how to connect a RJ45 plug are available in our video tutorial: "SAMCON 03 Mounting and installing the RJ45 jack to SAMCON cables" <https://go.samcon.eu/v03>



Figure 5-12 Plug assignment, RJ45

### 5.3.6 Tests prior to switching on voltage



**Attention!**

**Prior to starting the device, perform all tests as indicated by the national regulations. Furthermore, check the correct function and installation of the device in accordance with this User Manual and other applicable regulations.**



**Attention!**

**Incorrect installation or operation of the camera may lead to a loss of warranty!**



**Attention!**

**Do not switch on the camera at temperatures below 0°C!**

## 6 Working inside the camera housing (Ex-d)

The customer may open the housing only if it is absolutely necessary. Only a hardware reset is a reason for this.

### 6.1 Preparation for work:



**Attention!**

**Prepare your work carefully and in accordance with the relevant regulations.**



**Attention!**

**Depending on classification of hazard areas, it is imperative to obtain a work approval first!**

**If you adjust the camera yourself or open the pressure-resistant enclosure (Ex-d) under voltage, it is absolutely imperative to prevent potentially explosive atmosphere!**

### 6.2 Opening the pressure-resistant housing



**WARNING – MAY NOT BE OPENED IN HAZARD AREAS**

**Note: Depending on classification of hazard areas, it is imperative to obtain a work approval first!**

**Even after switching on the power supply, it is absolutely imperative to avoid potentially explosive atmosphere when opening the camera housing. Opening the housing requires disassembly and working in a safe (i.e. non-explosive!) area.**



**Attention!**

**Pay attention not to damage the thread surface of the flame-proof gap.**



**Attention!**

**Pay attention not to damage the housing seals. Keep them clean!**

If the ExCam miniTube IP is equipped with a weather protection roof this has to be removed prior to starting your work! To do so, loosen the 4x12mm button head screws M4\*0.7 at the front and rear sides of the bracket holders (Figure 6-1).

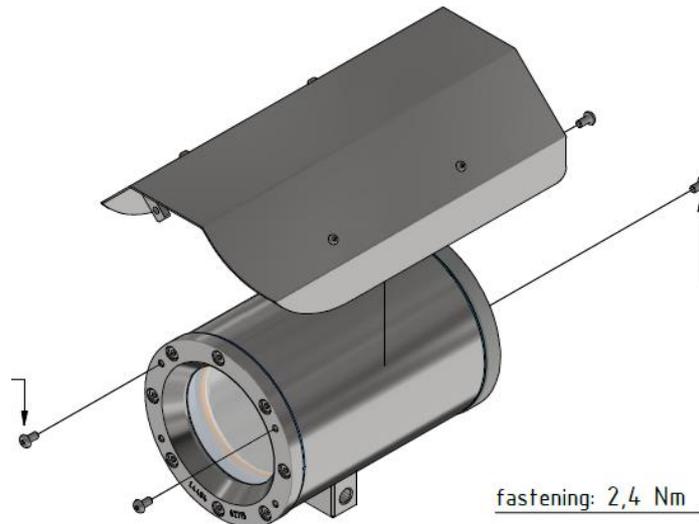


Figure 6-1 Removing the weather protection roof

To open the stainless-steel housing (T07 VA1.2.x.x) of ExCam miniTube IP, loosen the eight cylinder-head hexagon screws (DIN 912/ ISO 4762) together with their spring rings (DIN 127A) on the rear side of the cable and power supply flange (see Figure 6-2). Caution: do not touch the screw threads with your skin or clothes! On the threads, there is LOC-TITE® 243™ (chemical basis is dimethacrylate ester) applied to prevent the bolted connection from unintentional loosening because of impacts and vibrations and to seal them tightly. It is not permitted for the customer to open the front-side sight glass flange! There is no need of such an action.

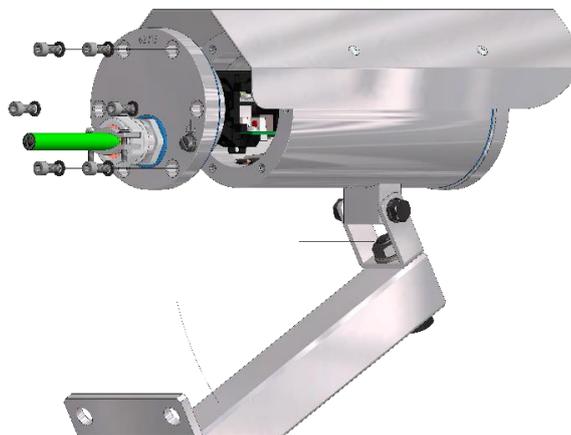


Figure 6-2 Opening ExCam miniTube IP

Carefully pull out the cable and supply flange to the rear, as straight as possible. Because of negative pressure, it may be difficult to remove the flange. The cylindrical clearance fit (H8f7 - DIN ISO 286) of the camera body and flange may not be tilted! Risk of damage to the flame-proof gap (DIN EN 60079-1:2012)!

Attention: The mounting adapter with the camera module and optics, as well as the temperature control, and (if applicable) auxiliary relays and terminal block are fixed on the cable and supply flange. Dealing with these components, too, you have to work very

carefully and precisely in order to avoid canting and damage to the in-built components! The module must be carefully rotated and tilted slightly. Caution: do not touch the cylindrical fit surface with your skin or clothes! On the surface, there is oil lubricating paste to protect the surface against fretting corrosion and mechanical stresses.

When you open the housing, pay attention that you do not damage the GYLON® flat seal (blue, RAL5012) and do not make it dirty! The flat gasket is loosely attached to the cable and power supply flange. It is fixed only by the bolted connections!



**Attention!**

**Pay attention not to damage the surface of the drill hole and the shaft (fitting) of the flame-proof gap.**



**Attention!**

**Pay attention not to damage the housing seals. Keep them clean!**

### 6.3 Hardware Reset

To set all the parameters of the ExCam miniTube IP (including the IP address) to default values, you should run a hardware reset.

The parameters can be reset via the web interface or manually. If the camera placed in the network can no longer be reached or its state is uncontrollable, the reset should be performed manually. To do so, proceed as follows:

1. Disconnect the camera installation module from the power supply.
2. Press and hold the reset button (see the illustration below) and, at the same time, connect the system to the voltage supply (PoE).
3. Hold the control button pressed for some seconds.
4. Release the control button. After about a minute, the ExCam miniTube IP will return to factory defaults. If there is a DHCP server in the network, the IP address will be the following: 192.168.1.10.
5. IP address and password can be redefined. If the hardware reset is not satisfactory or the network camera shows serious conflicts or does not work as usual (errors in the browser visualisation, frozen images, control commands no longer processed, slowing down of the system, etc.), it may be necessary to re-install the current firmware, or to install an update (see Chapter 7).

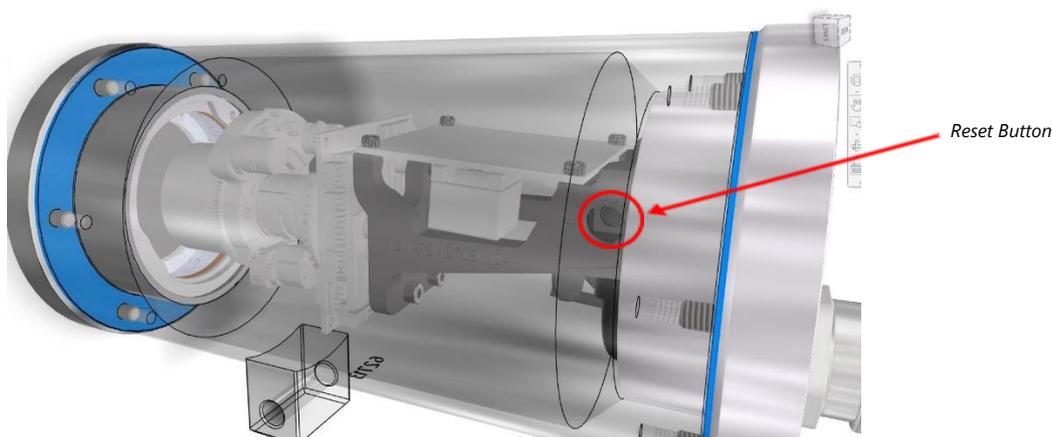


Figure 6-3 Structure of the camera

## 6.4 Closing of the pressure-resistant housing

For closing the housing, proceed in reverse order as when opening. Use exclusively original screws included in the supply.

The cable and power-supply flange (K1) is fixed by 8 cylinder-head screws M4\*0.7 (ISO metric right-turning) with 12 mm thread length (DIN 912/ ISO 4762, grade 6g). Materials of bolted connections are identical to the pressure-resistant stainless steel housing (standard material no. 1.4404 AISI316L). Check whether the threaded holes are undamaged and clean. Before closing, it is also absolutely imperative to check the flame-proof gap (circular cylindrical fit).



**Attention!**

**If any mechanical damages occurred to the fitting gap, it is no longer allowed to use the housing!**



**Attention!**

**Do not lock-in any foreign objects in the housing.**

Dismantled screw locks (spring washers DIN 127A) must be used again.

The GYLON® gasket must be used in undamaged condition, according to the flange hole pattern, and placed between the flange and the hull. The lateral position of the flat surface / contact surface is arbitrary.

If, when closing the housing, you see that the surface of the fitting gap is dirty or insufficiently lubricated, clean it with a clean cloth and de-grease it with a suitable cleaning agent. Then re-grease it with lubricant suitable for this specific application (e.g., Molykote® P-40 gel for standard applications or special grease OKS 403 in the event of heavy seawater influence).

The screwed connections of flange and body components must always be tightened *cross-wise* to a torque of **3 Nm**! Do not tighten the screw too strongly! It can cause rupture of the

cylinder head or over-stretching the threads, and thus to impairment of the pressure resistance or ignition protection class



**Cylinder-head bolts for explosion-proof connection of the camera body with the flange component must always be tightened at a 3 Nm torque - crosswise and evenly! Use Loctite.**

## 7 Network access and visualization

The camera is configured via the device's own website, the video stream can be accessed via RTSP or you can integrate the camera into your video management system using the ONVIF protocol.

### 7.1 Network access

The camera obtains an IP address via DHCP. If there is no DHCP server on the network, the **default IP address is 192.168.1.10**

Default username: **admin**

Default password: **admin**

Without a DHCP server, please add multiple cameras to the network one after the other to avoid conflicts due to identical IP addresses.

To find out the IP address of the camera assigned via DHCP, you can display or assign it using the **eneo Site Manager**.

### 7.2 eneo Site Manager - assigning the IP address

Download the eneo Site Manager here:

<https://eneo-security.com/en/eneo-site-manager.html>

The eneo Site Manager automatically detects cameras present in the network and displays their IP addresses in a device list. The ExCam miniTube IP has the designation "ISM-72M2713W0A".

If necessary, you can also assign a static IP address to the camera. To do this, select the camera in the list, right-click to open the context menu and then the network settings. Deactivate the DHCP checkbox and set the desired IP address.

### 7.3 Web interface, configuration and control

Enter the camera's IP address in your web browser and open the web interface. By automatically redirecting to https://... you may receive a message that the connection is not secure or private. Please confirm opening the website using the "Advanced" button.

Default username: **admin**

Default password: **admin**


The web interface is intuitive and offers a variety of configuration options. Detailed documentation on the web interface can be found in the eneo operating instructions:

<https://eneo-security.com/en/ism-72m2713w0a.html>

[234669\\_en\\_short\\_man.pdf \(eneo-security.com\)](#)

[234669\\_en\\_man.pdf \(eneo-security.com\)](#)

When delivered the ExCam miniTube IP is set to the applicable network frequency.  
PAL = 50Hz (Europe) / NTSC = 60Hz (USA)

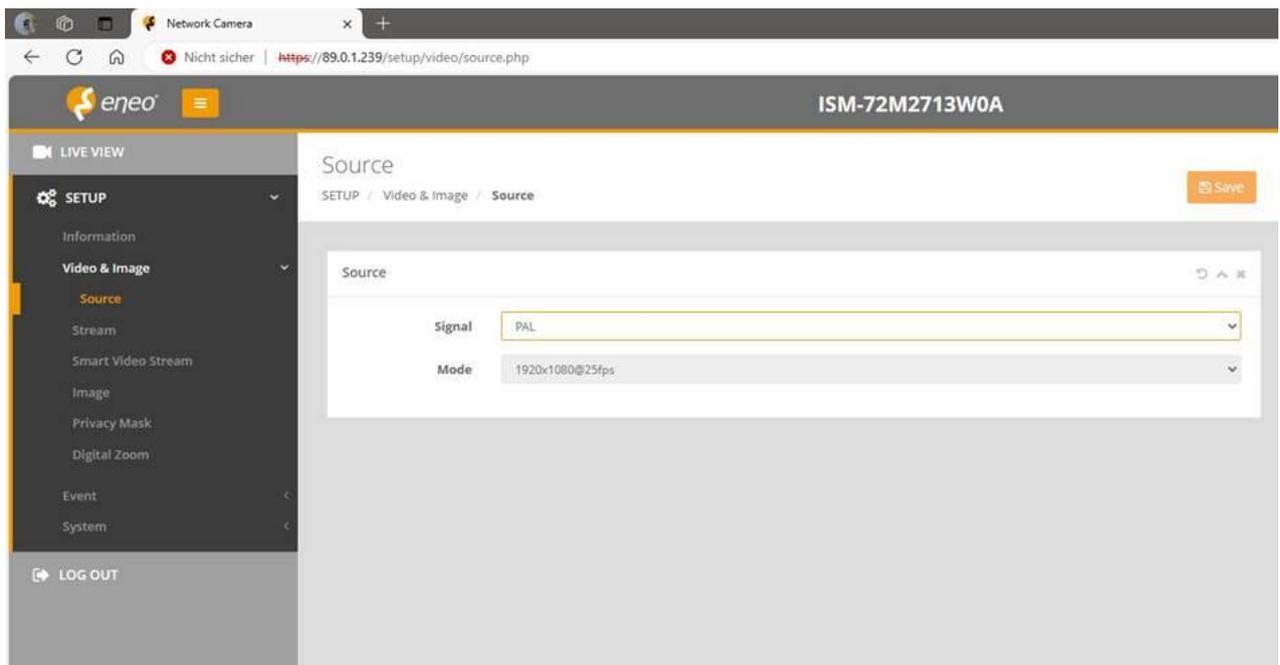

## 7.4 Visualization, RTSP video stream

The camera's video stream can be visualized via the following addresses:

### RTSP

rtsp://<user>:<password>@<ip>:554/1/stream1

rtsp://<user>:<password>@<ip>:554/1/stream2

rtsp://<user>:<password>@<ip>:554/1/stream3

Example:

rtsp://admin:admin@192.168.1.10:554/1/stream1

JPG (Stream 3)

http://<ip>/cgi-bin/snapshot.jpg

MJPEG (Stream 3)

http://<ip>/cgi-bin/jpegpush.cgi

## 7.5 ONVIF, VMS-Integration

The camera can be integrated into your video management system (VMS) via ONVIF Profile S and Profile T. We recommend [AXIS Camera Station](#) or [ONVIF Device Manager](#) for easy configuration.

## **8 Maintenance / Modification**

The applicable regulations for the maintenance and servicing of electrical devices in potentially explosive atmospheres must be adhered to.

The required maintenance intervals are specific to the individual devices. The operating company has to determine these intervals depending on the application parameters. The maintenance tasks especially include examination of parts on which the ignition protection depends (e.g., proper condition of the casing, seals and cable entry points). If maintenance measures are necessary they have to be initiated and/or executed.

Repairs may only be carried out with original parts of SAMCON Prozessleittechnik GmbH. Damaged pressure-resistant housings have to be replaced completely. In case of doubt, send the part in question back to SAMCON Prozessleittechnik GmbH.

Reparations concerning the explosion protection must only be carried out in accordance with nationally applied regulations by SAMCON Prozessleittechnik GmbH or by an authorised electrical technician authorised by SAMCON Prozessleittechnik GmbH. Rebuilding of or alterations to the devices are not permitted.

## **9 Disposal / Recycling**

When disposing of the device, nationally applicable regulations must be observed. This Document is subject to alterations and additions.

## **10 Drawings & 3D models, certificates and further documentation**

All drawings, 3D models, certificates and other information are available in the download area of the product page on our website:

<https://www.samcon.eu/en/products/network/excam-minitube-ip/>

[Analog Ex Cameras \(CVBS\)](#)
[Network Ex Cameras \(TCP/IP\)](#)
[ExCam IPM3016](#)
[ExCam miniTube IP](#)
[ExCam IPM1137-LE](#)
[ExCam IPM2036](#)
[ExCam IPP1275](#)
[ExCam IPP1377](#)
[ExCam IPQ1656 \(DLPU\)](#)
[ExCam IPQ1715](#)
[ExCam IPQ1785](#)
[ExCam IPP3827  
\(panorama\)](#)
[ExCam IPP5655](#)
[ExCam IPQ6075](#)
[ExCam IPP1280 \(thermal\)](#)
[ExCam XI80 \(thermal\)](#)
[ExCam XI410 \(thermal\)](#)
[Modular Ex Cameras](#)
[Robust Cameras \(non-ex\)](#)
[Your Individual Camera \(BTO\)](#)
[Ex Luminaires](#)
[Robust Luminaires](#)
[Ex-d Camera Enclosures](#)
[Connection Systems](#)
[Cables for Ex-Areas](#)
[Mounting Systems](#)
[Wash and Wipe Equipment](#)

#### Downloads:

- [Comparison Chart](#)
- [Datasheet](#)
- [3D-Model](#)
- [Usermanual](#)
- [Drawing](#)
- [CAD-Files \(DXF\)](#)
- [Ex Installation Manual](#)
- [ATEX Type Examination](#)
- [IECEX Cert.-of-Conformity](#)
- [UKEX-Certification](#)
- [EAC-Ex-Certification](#)
- [INMETRO](#)
- [MASC \(Southfrica\)  
Dec. of Conformity](#)

## ExCam<sup>®</sup> miniTube IP

The ExCam miniTube IP is a compact, powerful network camera with a **motorized varifocal lens**. It is particularly suitable for use in potentially explosive areas. It offers **FullHD resolution (1920x1080) and a 1/2.8" sensor for great image quality**. It is approved according to Directive 2014/34/EU (ATEX), IECEx, INMETRO, EAC-Ex, .... You can find these and other available approvals in the download area.

#### Features.

- Broad Certification Landscape for Hazardous Areas (ATEX, IECEx, INMETRO, EAC-Ex and more)
- Motorized Varifocal Lens
- High Resolution: FullHD 1920x1080p
- Unparalleled Light Sensitivity with 1/2.8" CMOS Sensor
- Day & Night Functionality
- Single-Cable-Solution (PoE)
- Protection Level of IP66/68 (IEC 60529)
- WDR Technologies
- Easy VMS Integration
- Multi-Streaming and Videocompression H.265
- [Extensive Accessories](#)

#### Varifocal motor zoom camera with excellent light sensitivity

With the ExCam miniTube IP, we are expanding our range to include a very compact explosion-proof varifocal camera with a motorized lens. The ExCam miniTube IP has a 1/2.8" CMOS sensor and the resulting excellent image quality, very high sensitivity and high resolution. The explosion-proof camera can operate with a minimum light intensity of 0.0008 lux, resulting in a significant improvement in image quality under limited lighting conditions. The camera achieves a high resolution of 1080p (1920x1080) at 30fps.

#### Explosion-proof varifocal motor zoom camera with ATEX, IECEx and more approvals

The ExCam series is certified under both the European (ATEX) and international directives ( IECEx ). The explosion-proof housing is approved for ATEX Group II for zones 1, 2 as well as Z1 and Z2 including explosion groups IIC / IIIC. It now also has a number of other approvals, such as INMETRO, PESO, MASC, UKEX and EAC-Ex.

When developing the ExCam series, great importance was placed on safety as well as mechanical precision and high-quality stainless steel. In addition, a modular structure was at the forefront of development.

With regard to the technical parameters, we have pushed the limits of what is possible: In areas such as media resistance and ambient temperature, we set standards with the ExCam series.

#### Small device - great functionality - maximum durability

The ExCam miniTube IP is an extremely compact camera. It is housed in a small, extremely robust stainless steel housing and is perfect for use in the most demanding environments under the harshest conditions in the world. The Ex-d housing of the Full HD camera is IP66/68 compliant and, thanks to the high-quality materials, resistant to a wide range of media! The ExCam miniTube IP can be used at ambient temperatures between -30°C and +50°C.

#### Quick installation and wiring

Connection and assembly are incredibly easy. Thanks to Power over Ethernet ( PoE ), data and power supply can be carried in one cable. This means that only a PoE switch or a PoE midspan is required for the connection in the safe area. The camera is powered via Power over Ethernet ( PoE according to IEEE 802.3af) via the network, eliminating the need for costly installation of a separate power supply line.

#### WDR for perfect Pictures also at bad Lighting conditions - automatic Image optimization

WDR equals Differences in brightness in one scene out of. The DOL-WDR function of the ExCam miniTube IP

If you wish additional technical information, please contact us at: [support@samcon.eu](mailto:support@samcon.eu)



**SAMCON**

Schillerstrasse 17, 35102 Lohra-Altenvers,  
Germany

[www.samcon.eu](http://www.samcon.eu), [info@samcon.eu](mailto:info@samcon.eu)

Phone: +49 6426 9231-0, fax: - 31

